

#### SAMPLE ONLY iC8000 CONTROLLER WIRING PACKAGE

Date: ??/??/????

Checked by: ??

Customer: Project Name: Project Number: Total Number of Zones	ABC ABC House 123 8						
The Controls Strategy table attached lists the room names (if known) and the Panel Module assigned to each room. It highlights the product being controlled in each room, the sensors to be used and if night cooling is enabled. The table also shows which wiring diagram sheet number should be referenced for each room during electrical installation.							
The Wiring Diagrams attached are to be used on site during electrical installation, along with the Controls strategy table.							
Please Report all errors.							
To allow us to commence manufacture and ensure we have interrupted your controller requirements for this project correctly please sign the below. This is to confirm that the zone names, sensor types and the items shown being controlled are correct on all sheets of the following controls strategy table, schedule and wiring diagrams. It is also to confirm that you are happy with the layout of the rooms connected to each Panel Module.							
Signature:							
Print Name:							
Company:							

Cover 120719.doc

Date:

Passivent Issue No: ??



#### **Controls Strategy Table**

#### **Panels**

Panel Module	Zone No.			Control via Analogue output (max 2 No)			Control On/Off	Wiring Diagram	
No.		Room	Sensors	Louvre Damper	24v Window Actuators (iWAC No.)	240v Window Actuators (iWAC No.)	0-10V output for 3 <sup>rd</sup> party Fans	Boost Sweep Fans or A/C	SHEET No.
1 (Master)	1	History 1	Avg Temp & CO2	Yes	No	No	No		1
	2	History 2	Avg Temp & CO2	Yes	No	No	No		1
	3	History 3	Avg Temp & CO2	Yes	No	No	No		1
2	1	Maths 1	Avg Temp & CO2	Yes	Yes (2 No.)	No	No		1
	2	Maths 2	Avg Temp & CO2	Yes	Yes (2 No.)	No	No		1
	3	English 1	Avg Temp & CO2	Yes	Yes (2 No.)	No	No		1
	4	English 2	Avg Temp & CO2	Yes	Yes (2 No.)	No	No		1
3	1	Sports Hall	Avg Temp & CO2 + Remote override	Yes	No	No	No	Fan	2

#### Notes:

Local Room Override type selected is Surface mounted for all rooms.

Night cooling enabled for natural ventilation products. Except for automatic windows which are disabled closed at night.

#### SAMPLE WIRING DRAWINGS BEFORE ORDER STAGE -NOT TO BE USED FOR WIRING ON SITE

These notes are to be read in conjunction with the wiring diagram for the associated site.

- 1) All field wiring to be in twisted pair screened cable (see Cable Types below). Refer wiring diagram details for earthing the screen.
- These cables are low voltage signal cables and must be segregated from mains or high voltage cables and electrical apparatus.
- The cable should not be run adjacent to or within close proximity to ballast lighting or any main electrical apparatus that emits electrical RF noise. Max cable length up to 100m (excluding Window Actuators), which must be confirmed by Electrical Consultant
- 2) All cables to be continuous in length with no joints / connections.
- 3) The local MS/TP BACnet network is connected via the RS485 sockets within the panels, This network must be only a daisy-chained configuration, consisting of a single cable routed between RS485 sockets. Star and Ring network topologies are not supported. Do not loop back the last slave to the master panel module on the BACnet network cable.
- 4) Connections to BMS systems require a MSTP/IP Router (for Native BACnet), supplied by others.
- 5) A 240V 5 amp switch spur to be supplied and fitted (by others) adjacent to all Panel Modules requiring a power supply.
- 6) It is recommended that a section of 50mm x 50mm trunking is used along the top of the controller enclosure to harness all the field cables.
- 7) The maximum Panel Module terminal connection size is 2.5mm2.
- 8) The Heating override interlock switch or relay is supplied by others.
- 9) The Fire interlock switch is supplied by others.
- 10) The zonal field wiring to the louvre actuators is looped in at each location to the next damper. Please ensure polarity of supplies is maintained at all locations.
- 11) The location of the sensors and override units is to be agreed for each installation. Sensors should be mounted at approximately 1.5/1.7m above the finished floor level. Away from heat sources i.e. radiators. PC's and out of direct sunlight/ventilation draughts etc.
- 12) It is the installer's responsibility to ensure all wiring meets the prevailing electrical regulations.
- 13) The temperature thermistor can be located in the temp sensor, combined temp and CO2 sensor or the local room override, so links maybe requied in the panel. These links are supplied as standard within the panel and the Passivent Commissioning Engineer will remove as necessary.
- 14) IWACs (window actuator controllers), Relays and Integrators require a Local switch fused spur (by others)

#### CABLE TYPES

#### From control panels to field items

- Room Sensors and Local Room Override(s)
- 6-core (3 twisted pair) screened cable. Typical size 0.33mm2, Belden 8777.
- Ventilators / IWAC (Window Controllers) / Integrators
- 4-core (2 twisted pair) screened cable, Typical size 0.33mm2, Belden 8723.
- Rain sensor (if applicable) -
- 4-core (2 twisted pair) screened cable, Typical size 0.33mm2, Belden 8723.
- External temperature sensor / Heating Interlock / Fire alarm Interlock -
- 2-core (Single twisted pair) screened cable, Typical size 0.33mm2, Belden 8761.
- Weather Station (if applicable) -

Recommend Beldon 9841 cable (Single twisted pair + drain) for RS485 communications DIN mounted socket connection and

a 2 core (1 twisted pair) screened cable for the power supply, Typical size 0.33mm2, Belden 8761.

#### From iWAC to window actuators

- Window actuators
- 2-core cable, typcial size cross sectional area 0.75mm2 for 1 actuator and 1.5mm2 for 2 (syncronised) actuators, up to a maximum of 40m cable length.

Window actuator cable size must be confirmed by Electrical Consultant,

#### Communications

- BACnet Network / BMS communications -

Recommend Beldon 9841 cable (Single twisted pair + drain) or direct equivalent.

A RS485 communications DIN mounted socket is located within the panel module for connection.

DO NOT USE Bell wire, Cat 5, Single cables, T&E, MICC (Pyro) or SWA for sensors or actuators.

The above cables pairs have been recommended for standardisation. In some applications the pairs maybe reduced. Refer component wiring diagrams for details.

WWW.PASSIVENT.COM EMAIL: PROJECTS@PASSIVENT.COM TELEPHONE: 01732 850 770 FAX: 01732 850 949


DO NOT SCALE: REPORT ALL ERRORS

PROVISIONAL DRAWING							
DRAWING SAMPLE IC8000 CONTROL PANEL							
		,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,					
SCALE		NTS	DRAWN		WA		
DATE		19.07.12	MOD.				
DRAWING	No.	PVC?????	/WD	SHEET	0		


ALL DIMENSIONS IN MILLIMETRES unless indicated on drawing.

All Designs and Drawings are the copyright of Passivent Ltd

**PROJECT** 

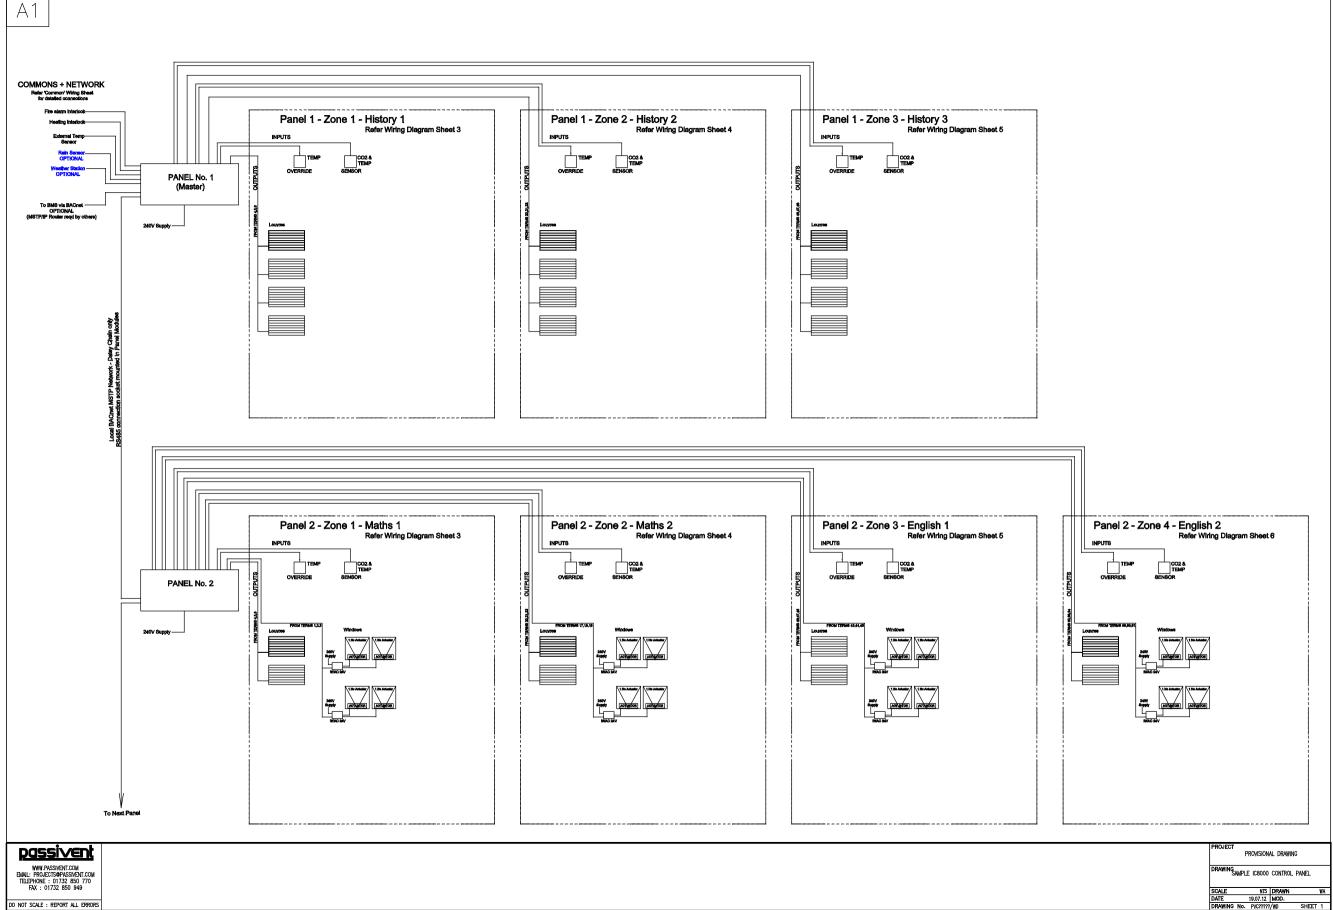

ALL DIMENSIONS IN MILLIMETRES unless indicated on drawing.

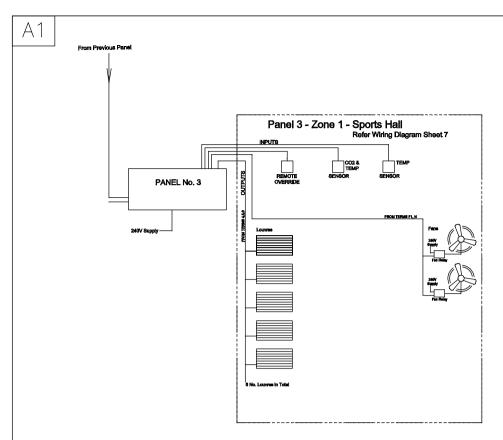


<u>passivent</u> WWW.PASSIVENT.COM EMAIL: PROJECTS@PASSIVENT.COM TELEPHONE: 01732 850 770 FAX: 01732 850 949

PROVISIONAL DRAWING DRAWING SAMPLE IC8000 CONTROL PANEL

SCALE NIS DRAWN WA
DATE 1907.12 MOD.
DRAWNING No. PICTYTY/ID SHEET 2

All Designs and Drawings are the copyright of Passivent Ltd

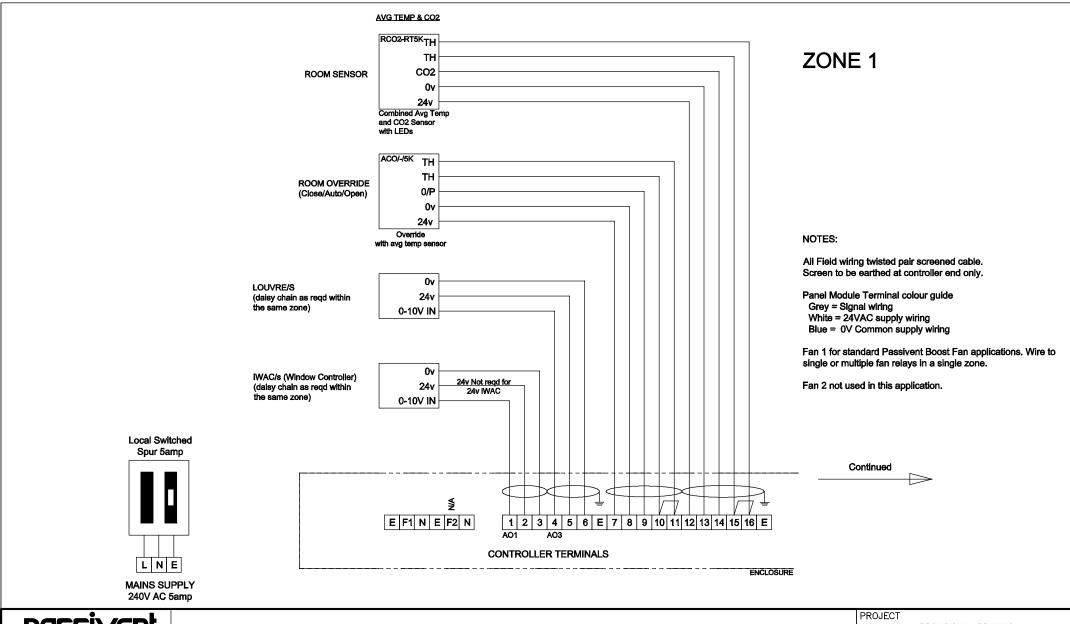

WWW.PASSIVENT.COM EMAIL: PROJECTS@PASSIVENT.COM TELEPHONE: 01732 850 770 FAX: 01732 850 949

DO NOT SCALE: REPORT ALL ERRORS


PROJECT PROVISIONAL DRAWING

DRAWING SAMPLE IC8000 CONTROL PANEL

SCALE NTS DRAWN WA

DATE 19.07.12 MOD.

DRAWING No. PYC?????/WD SHEET 3

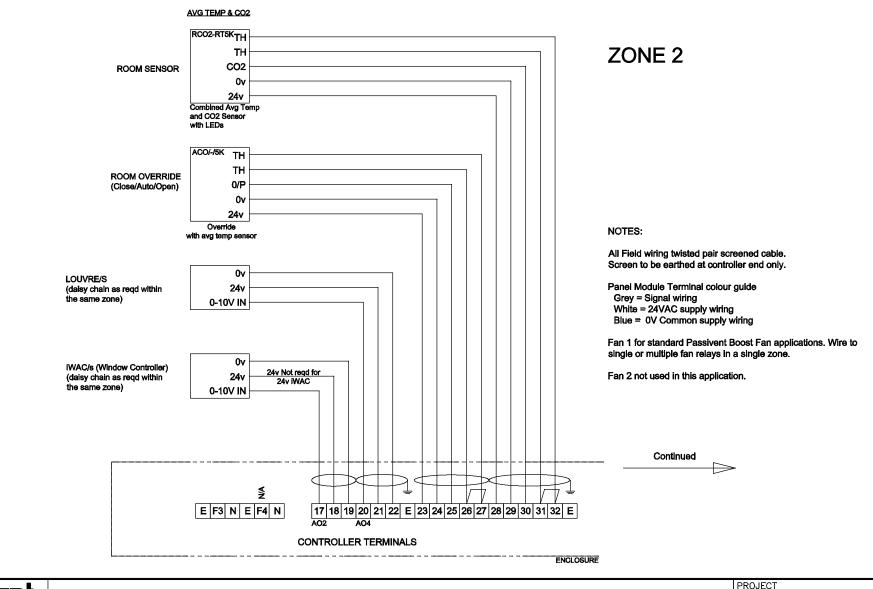

WWW.PASSIVENT.COM EMAIL: PROJECTS@PASSIVENT.COM TELEPHONE: 01732 850 770 FAX: 01732 850 949

DO NOT SCALE : REPORT ALL ERRORS


PROVISIONAL DRAWING

DRAWING
SAMPLE IC8000 CONTROL PANEL

 SCALE
 NTS
 DRAWN
 WA

 DATE
 19.07.12
 MOD.

 DRAWING
 No.
 PVC??????/WD
 SHEET
 4

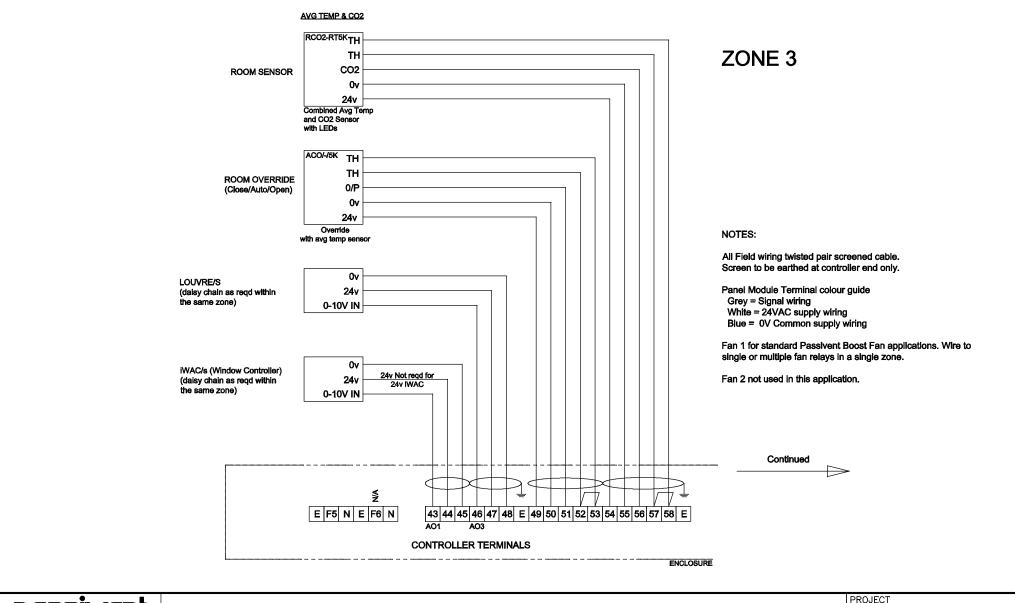

WWW.PASSIVENT.COM EMAIL: PROJECTS@PASSIVENT.COM TELEPHONE: 01732 850 770 FAX: 01732 850 949

DO NOT SCALE: REPORT ALL ERRORS

PROVISIONAL DRAWING

DRAWING SAMPLE IC8000 CONTROL PANEL


SCALE NTS DRAWN WA
DATE 19.07.12 MOD.

SHEET 5

ALL DIMENSIONS IN MILLIMETRES unless indicated on drawing.

All Designs and Drawings are the copyright of Passivent Ltd

DRAWING No. PVC?????/WD

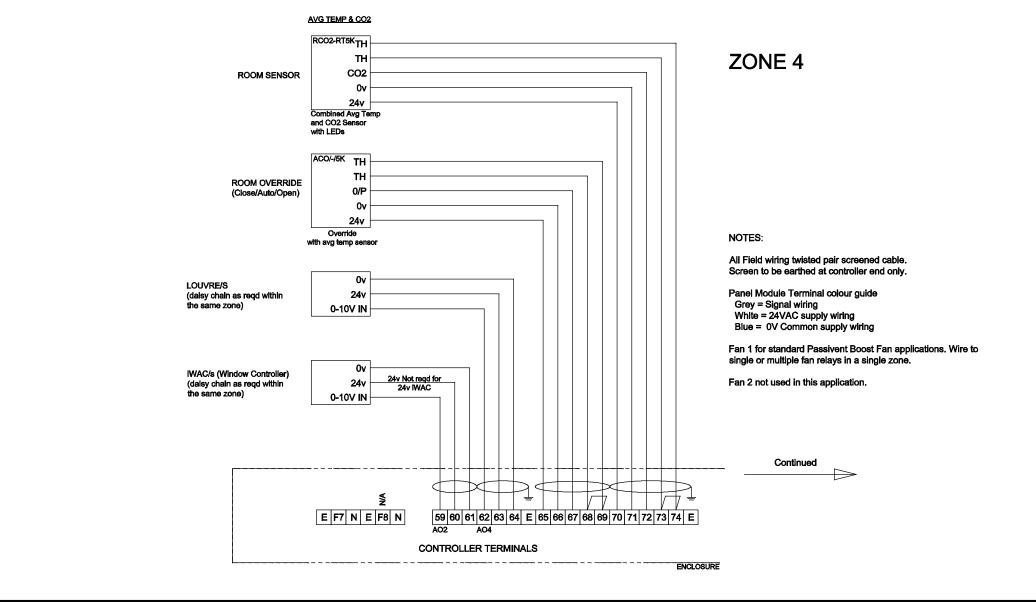

WWW.PASSIVENT.COM EMAIL: PROJECTS@PASSIVENT.COM TELEPHONE: 01732 850 770 FAX: 01732 850 949


DO NOT SCALE: REPORT ALL ERRORS

PROVISIONAL DRAWING

DRAWING SAMPLE IC8000 CONTROL PANEL

SCALE NTS DRAWN WA
DATE 19.07.12 MOD.

DRAWING No. PVC?????/WD SHEET 6

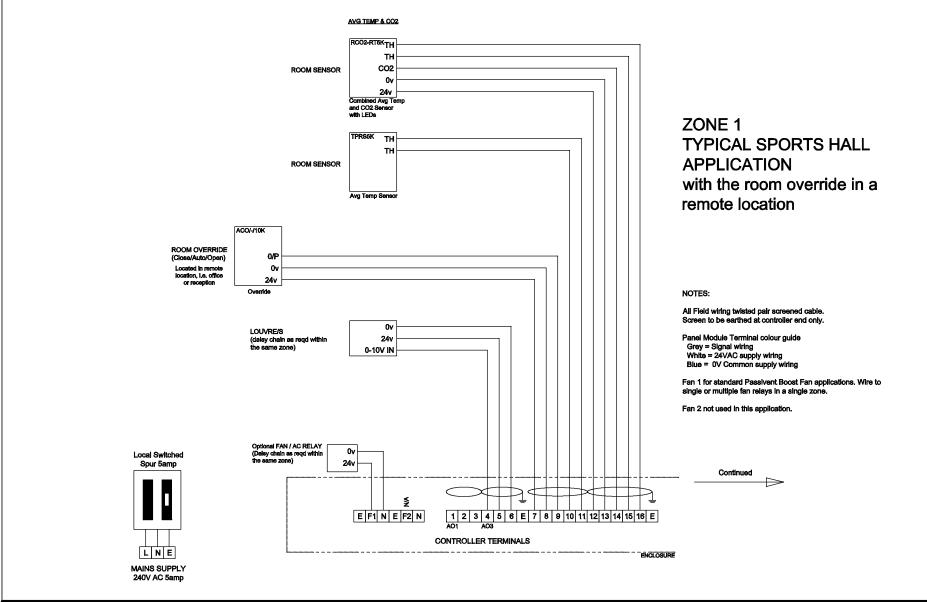

# passivent

WWW.PASSIVENT.COM EMAIL: PROJECTS@PASSIVENT.COM TELEPHONE: 01732 850 770 FAX: 01732 850 949

DO NOT SCALE: REPORT ALL ERRORS

PROJECT PROVISIONAL DRAWING


DRAWING SAMPLE IC8000 CONTROL PANEL

 SCALE
 NTS
 DRAWN
 WA

 DATE
 19.07.12
 MOD.

 DRAWING
 No.
 PVC??????/WD
 SHEET
 7

#### COMMON INPUTS AND INTERLOCKS ON MASTER CONTROLLER 1 ONLY

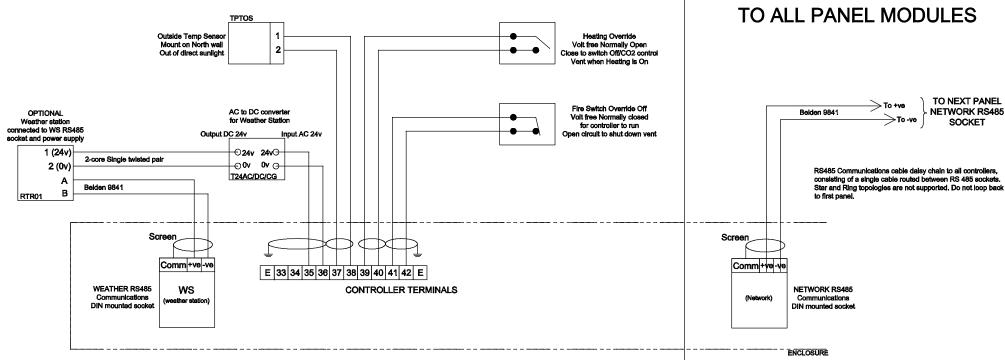

NOTES:

RS485 DIN sockets are connected using Belden 9841 cable (2 core + drain wire). The Drain wire is connected to the Comm RS485 terminal for screening.

Panel Module Terminal colour guide Grey = Signal wiring White = 24VAC supply wiring Blue = 0V Common supply wiring

WWW.PASSIVENT.COM EMAIL: PROJECTS@PASSIVENT.COM TELEPHONE: 01732 850 770 FAX: 01732 850 949

DO NOT SCALE : REPORT ALL ERRORS

**PROJECT** PROVISIONAL DRAWING

DRAWING SAMPLE IC8000 CONTROL PANEL COMMONS + OPTIONAL WEATHER STATION

TO NEXT PANEL

**NETWORK RS485** 

SOCKET

SCALE NTS DRAWN WA DATE 19.07.12 MOD. DRAWING No. PVC?????/WD

ALL DIMENSIONS IN MILLIMETRES unless indicated on drawing.


All Designs and Drawings are the copyright of Passivent Ltd

**NETWORK CONNECTION** 

# LOUVRE CONNECTIONS

(Actuators)

## Connect via safety isolating transformer

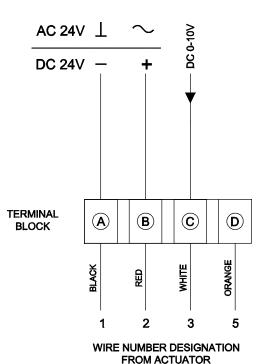

#### NOTES:

- Installation must be in accordance with BS7671-IEE Wiring Regulations (latest revision).
- The DC 0 -10V signal into terminal C is to be derived from the controller.

# <u>passivent</u>

WWW.PASSIVENT.COM EMAIL: PROJECTS@PASSIVENT.COM TELEPHONE: 01732 850 770 FAX: 01732 850 949

DO NOT SCALE : REPORT ALL ERRORS


PROJECT
PROVISIONAL DRAWING

DRAWING SAMPLE IC8000 CONTROL PANEL
LOUVRE CONNECTIONS

SCALE NTS DRAWN WA
DATE 19.07.12 MOD.

DRAWING No. PVC?????/WD

ALL DIMENSIONS IN MILLIMETRES unless indicated on drawing.

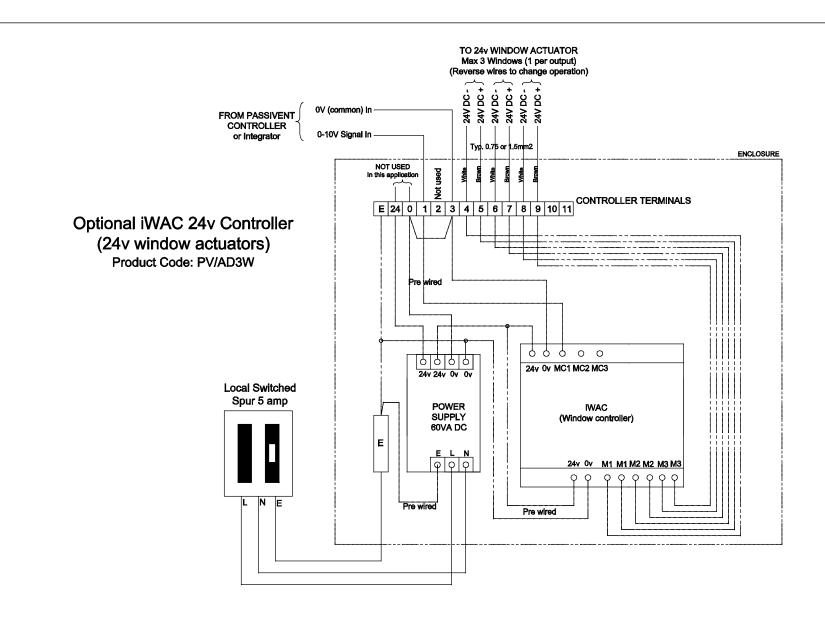



WWW.PASSIVENT.COM EMAIL: PROJECTS@PASSIVENT.COM TELEPHONE: 01732 850 770 FAX: 01732 850 949

DO NOT SCALE : REPORT ALL ERRORS

 PROJECT

 PROVISIONAL DRAWING

 DRAWING

 SAMPLE IC8000 CONTROL PANEL

 iWAC 24V CONTROLLER

 SCALE NTS DRAWN WA


 DATE 19.07.12 MOD.

 DRAWING No. PVC?????/WD

ALL DIMENSIONS IN MILLIMETRES unless indicated on drawing.

# Optional Fan / AC Relay (24V Signal)

Product Code:PV/SRMSP24vAC

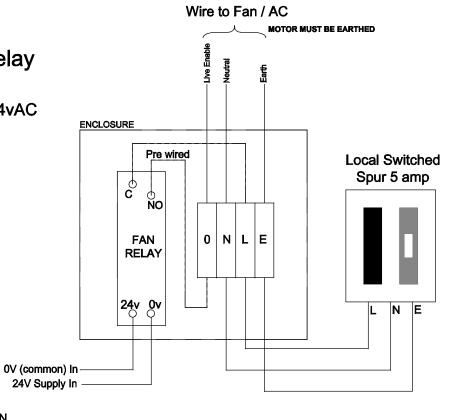

FROM PASSIVENT CONTROLLER FAN TERMINALS

To Panel No. ? - Terminals F?&N

#### NOTES:

Fuse rating maybe different for AC applications, check AC details. All Field wiring in Belden screened cable 1.0mm2. Screen to be earther at controller end only.

### passivent

WWW.PASSIVENT.COM EMAIL: PROJECTS@PASSIVENT.COM TELEPHONE: 01732 850 770 FAX: 01732 850 949

DO NOT SCALE: REPORT ALL ERRORS

PROJECT
PROVISIONAL DRAWING

DRAWING
SAMPLE IC8000 CONTROL PANEL
FAN / A.C. ACTIVATION RELAY

SCALE NTS DRAWN WA
DATE 19.07.12 MOD.

DRAWING No. PVC?????/WD

ALL DIMENSIONS IN MILLIMETRES unless indicated on drawing.